Dlubal RFEM6

Step 1: Open the template file “KLH Template” for Dlubal RFEM6 to use the KLH® panel list with the stored stiffness parameters.

Step 2: Create or edit a surface in the usual way. Under the menu item “Thickness with Material” you will find the KLH® panel list with the corresponding stiffness parameters.

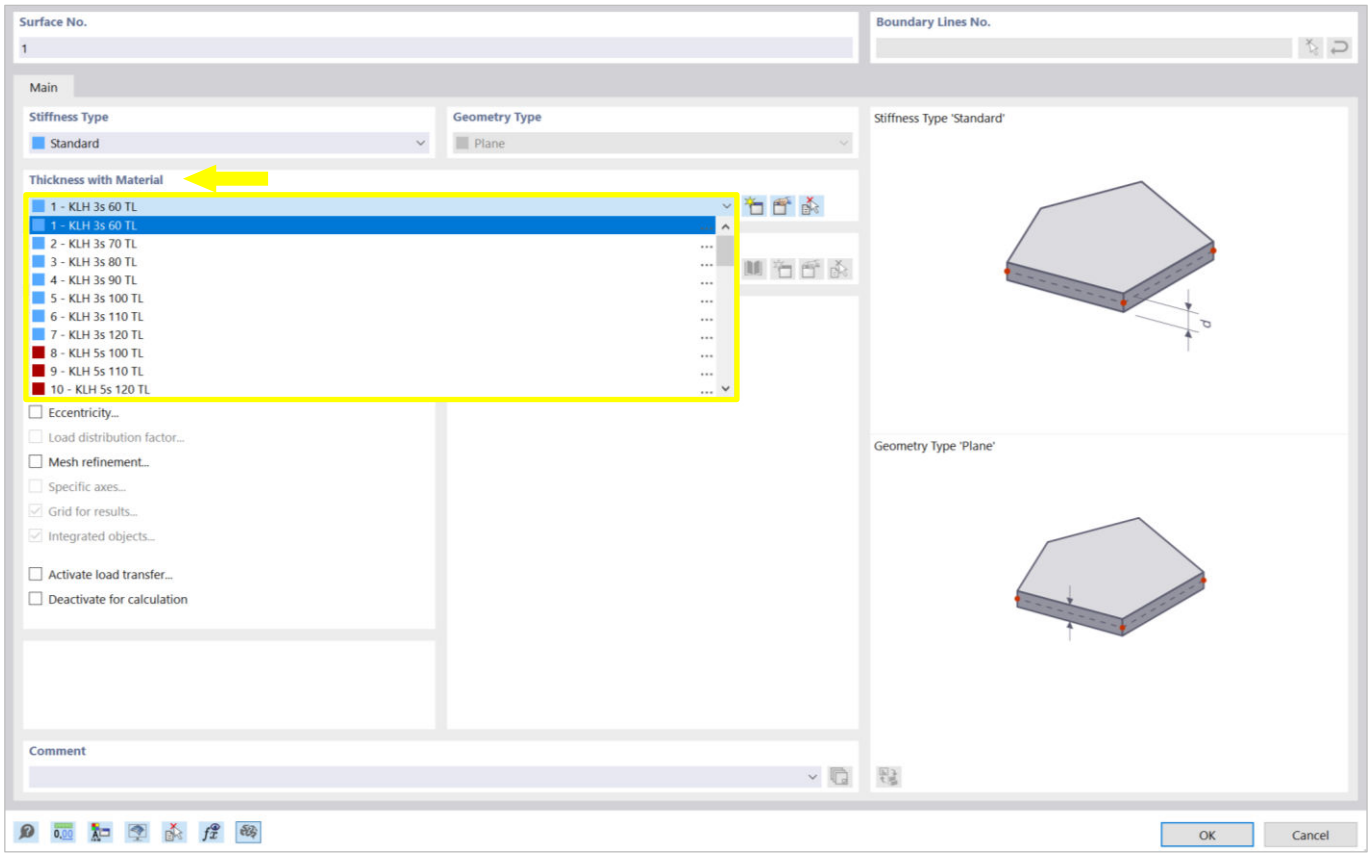

Dlubal RFEM6

Expert Tip: To view the characteristic stiffness values of the KLH® panels, right click on “Thicknesses” in the Navigator - Data and select “Edit...”. In the window “Edit Thickness” that opens, you will find the defined KLH® panel list. To output the stiffness parameters of the selected KLH® panel, select the “Stiffness Matrix” option in this menu.